

Using the Extron Touch Panel Media Controller - Bosler 208

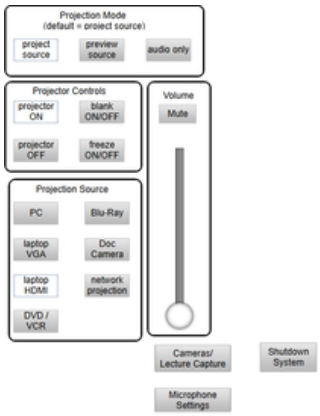

Projector Controls

- Powers on the projector and classroom system
- The system is ready when the button turns white

- Powers off the projector
- Allow a moment for the projector to shut down

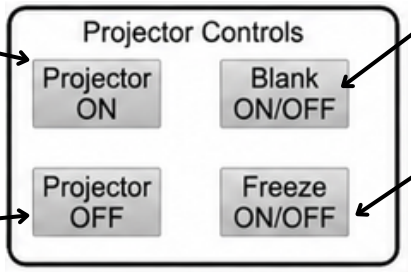

- Hides the projected image

- Freezes the image currently being projected
- Useful when checking something privately on your device


Projection Source

- Best choice for most classes
- Uses existing instructor computer to connect to all room resources

- Connects video
- Audio, cameras, and wired network are not available

- Connects audio and video
- Cameras and wired network are not available

- Displays the DVD/VHS player
- Turn the player on from the device itself (if needed)

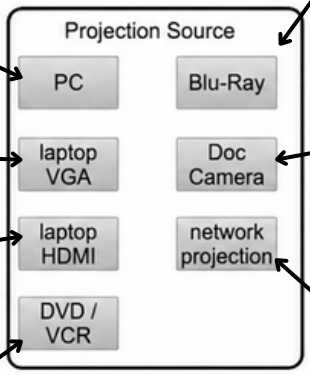


- Displays the Blu-Ray player
- Turn the player on from the device itself (if needed)

- Displays the classroom document camera
- Turn the camera on/off from the device itself

- Connects a device wirelessly to the projector
- Useful for student presentations; USB-C is preferred for regular use


Projection Mode

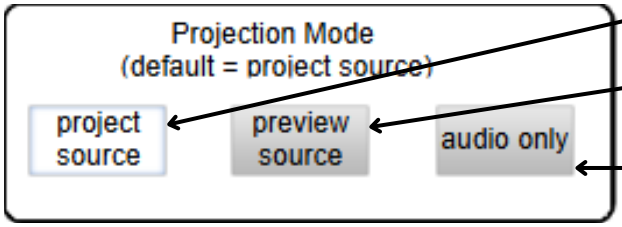

- Projects the chosen device onto the screen
- Shows the chosen device in the preview window on the touch panel
- Plays the device audio and does not display an image

OVER


Audio Controls

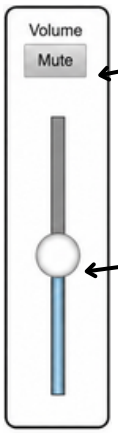

- Mutes the classroom speakers
- Adjusts the volume of the classroom speakers
- Ensure your device's volume is on and the correct audio output is selected

Microphone Settings

- Opens settings for the wireless and ceiling microphones
- Adjusts the audio level of the microphone going into the recording
- Adjusts the audio level of the microphone coming out of the classroom speakers

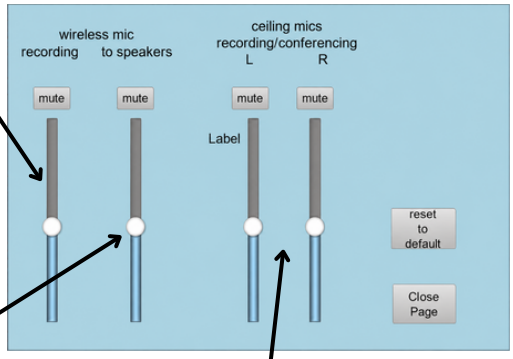


- Adjusts the audio level of the ceiling microphones going into the recording
- Captures classroom sound

Camera Controls

Cameras/ Lecture Capture

- Opens the controls for the classroom's cameras
- Select the front or rear camera before making adjustments

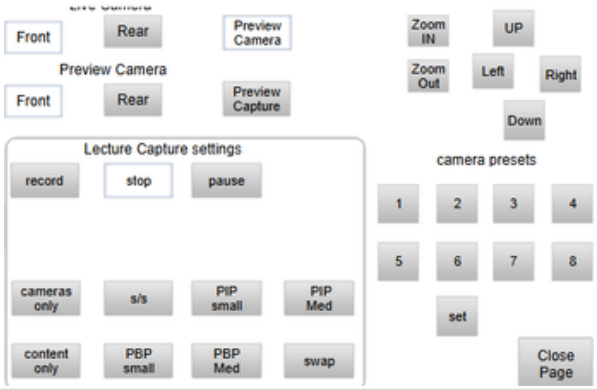


Control	What It Does
Live Camera – Front	Selects the front camera as the live camera source.
Live Camera – Rear	Selects the rear camera as the live camera source.
Preview Camera – Front	Selects the front camera for preview.
Preview Camera – Rear	Selects the rear camera for preview.
Preview Camera	Opens or displays the preview camera view.
Zoom In	Zooms the selected camera in closer.
Zoom Out	Zooms the selected camera out.
UP / Down / Left / Right	Moves the selected camera in the chosen direction.
Record	Starts lecture capture recording.
Stop	Stops lecture capture recording.
Pause	Temporarily pauses lecture capture recording.
Cameras Only	Shows only the camera feed in the lecture capture layout.
Content Only	Shows only the presentation/content source in the lecture capture layout.
S/S	Displays both sources side by side.
PIP Small	Shows picture-in-picture with a small inset window.
PIP Med	Shows picture-in-picture with a medium inset window.
PBP Small	Shows picture-by-picture in a smaller layout.
PBP Med	Shows picture-by-picture in a medium layout.
Swap	Swaps the positions of the camera and content sources.
Camera Presets 1–8	Recalls saved camera positions.
Set	Saves the current camera position to a preset.
Close Page	Returns to the previous touch panel page.

OVER

Blu-Ray Controls


Control	What It Does
Power	Turns the Blu-ray player on or off.
Open/Close	Opens or closes the disc tray.
Top Menu	Opens the disc's main menu.
Home	Opens the player's Home Menu and settings.
Arrow Buttons	Move through menus and available options.
Enter	Selects the highlighted menu option.
Return	Returns to the previous menu or screen.
Play	Starts or resumes playback.
Pause	Temporarily pauses playback.
Stop	Stops playback.
Rev / Rew	Searches backward or returns to an earlier playback point.
Fast Fwd / Fwd Step	Searches forward or advances to the next frame or playback point.
Audio	Changes the available audio track or language.
Subtitle	Changes or turns subtitles on or off.
Function	Opens additional playback options.
Color Buttons	Perform matching color-coded actions when supported by the disc.
Close Page	Closes the Blu-ray controls and returns to the previous touch-panel screen.

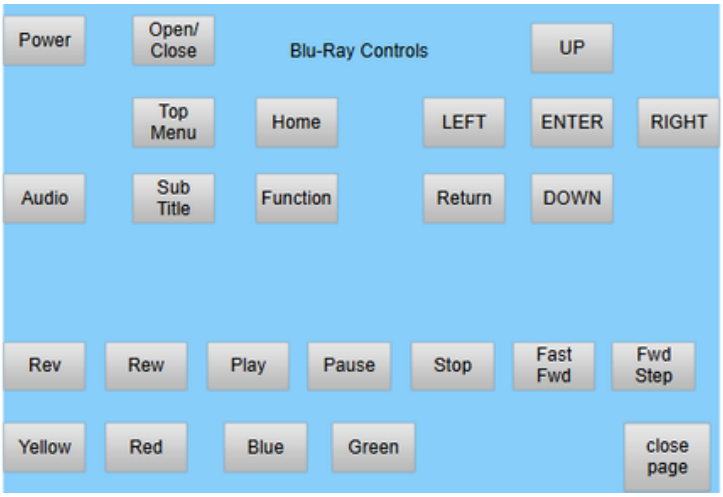

OVER

DVD/VCR Controls

Control	What it does
Power	Turns the DVD/VCR unit on or off.
Eject	Opens or closes the disc tray / ejects media.
DVD	Switches the unit to DVD mode.
VCR	Switches the unit to VCR mode.
Aux	Switches to the auxiliary/input source.
Top Menu	Opens the DVD disc's main menu.
Title	Opens the DVD title menu, if available.
Audio	Changes the audio track or language, if available.
UP / DOWN / LEFT / Right	Moves through menus and available options.
ENTER	Selects the highlighted option.
Return	Returns to the previous menu or screen.
Sub Title	Turns subtitles on or off, or changes subtitle options.
Chapter	Jumps to another chapter or moves by chapter.
Display	Shows playback or disc information on screen.
Rev Search	Searches backward through the video.

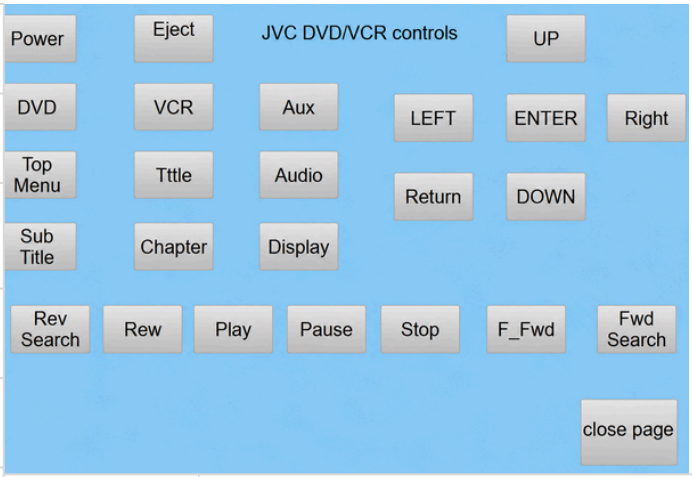

Rew	Rewinds playback.
Play	Starts or resumes playback.
Pause	Temporarily pauses playback.
Stop	Stops playback.
F_Fwd	Fast-forwards playback.
Fwd Search	Searches forward through the video.
Close Page	Closes the DVD/VCR controls screen and returns to the previous touch-panel page.

Other Controls



- Shuts down classroom system
- Always use this when finished with the room

OVER