

Using the Extron Touch Panel Media Controller

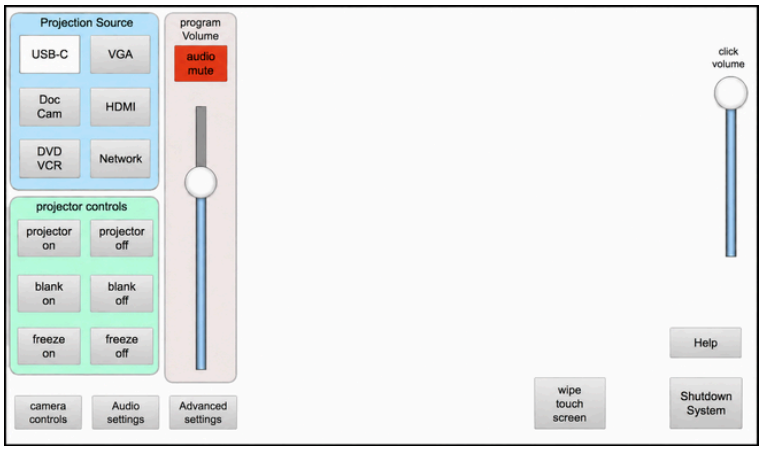

Projector Controls

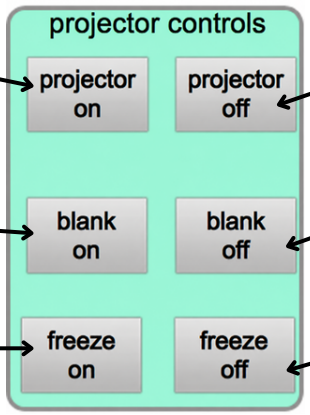

- Powers on the projector and classroom system
- The system is ready when the button turns white

- Powers off the projector
- Allow a moment for the projector to shut down


- Hides the projected image

- Restores the projected image

- Freezes the image currently being projected
- Useful when checking something privately on your device

- Restores the live projected image

Projection Source

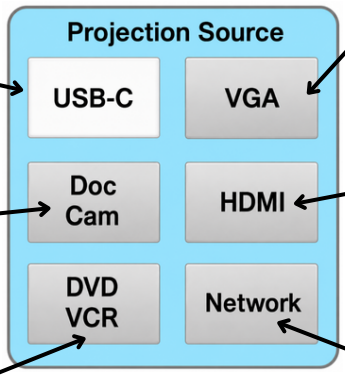

- Best choice for most classes
- Connects video, audio, cameras, and wired network

- Connects video only
- Audio, cameras, and wired network are not available

- Displays the classroom document camera
- Turn the camera on/off from the device itself

- Connects audio and video
- Cameras and wired network are not available


- Displays the DVD/VHS player
- Turn the player on from the device itself (if needed)

- Connects a device wirelessly to the projector
- Useful for student presentations; USB-C is preferred for regular use

---

OVER


Audio Controls

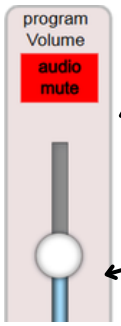


- Mutes the classroom speakers
- Red indicates the audio is muted

- Adjusts the volume of the classroom speakers
- Ensure your device's volume is on and the correct audio output is selected

- Adjusts the volume of the touch panel's button feedback
- Does not change the classroom speaker volume

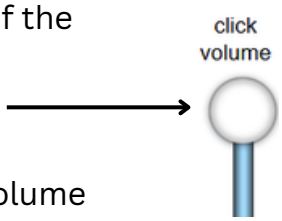

Other Controls

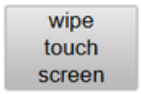

- Temporarily disables the panel buttons for cleaning
- Prevents accidental selections while wiping the screen




- Opens instructions for using classroom equipment



- Shuts down classroom system
- Always use this when finished with the room


Camera Controls

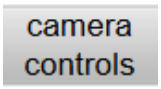

- Opens the controls for the classroom's PTZ cameras
- Select the front or rear camera before making adjustments

- Selects the camera you want to control
- Confirm the correct camera is selected before making adjustments

- Moves the selected camera to a saved position
- Use a preset for quick, automatic camera placement

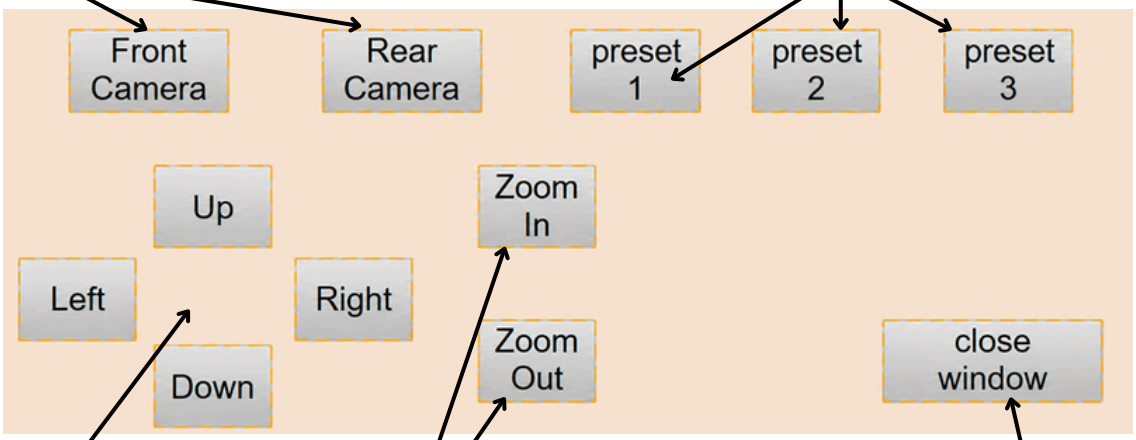

- Manually moves the selected camera
- Use for small positioning adjustments

- Adjusts how closely the camera frames the subject

- Closes the camera controls
- Returns to the main touch panel screen

OVER